



NOTE: Maximum wire sizes per connector are 3 - #14's or 2 - #12'S.




Step 1: Strip wires 1/2" from ends.

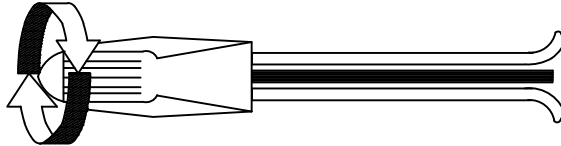

Step 2: Apply scotchlok y spring connector in a clockwise direction.

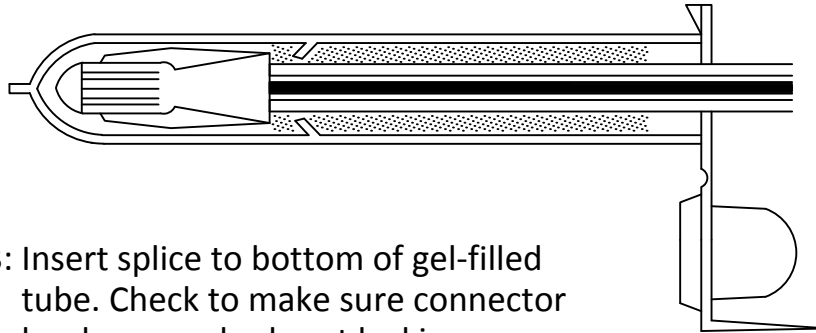

Step 3: Insert splice to bottom of gel-filled tube. Check to make sure connector has been pushed past locking fingers and is seated at the bottom of tube.

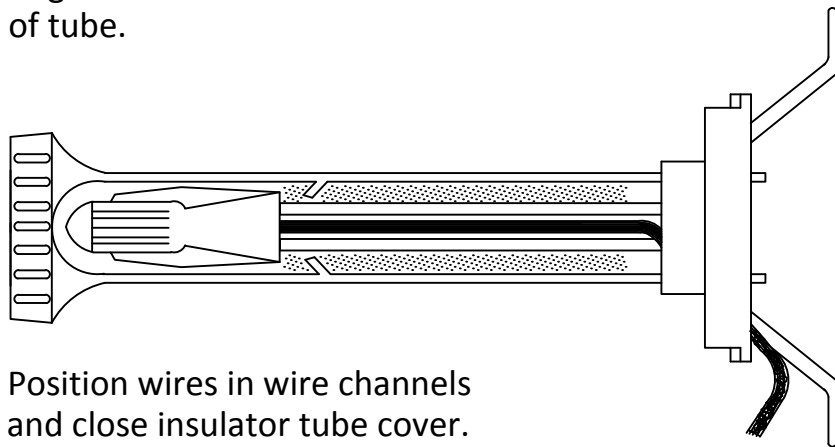

Step 4: Position wires in wire channels and close insulator tube cover.

| Rev | By | Date |
|------------|-----|----------|
| 1 | MMN | 3/15/05 |
| 2 | RTN | 06/11/17 |
| | | |
| | | |
| Scale: NTS | | |

Irrigation: Wire Connectors

City of Palo Alto Standard

| | |
|--------------|----------|
| Approved by: | |
| PE No. | 72158 |
| Date | 01/10/18 |
| Dwg No. | 505 |